



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
LIST	-/--
/ S. MODE	
/ P. MODE	
/ P. SIZE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
DTV / RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
/ GUIDE	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
SUB.	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE / TS	SHIFT+YELLOW
FWD	SHIFT+BLUE

