



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
	-/--
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
	SLEEP
	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
T.S.	EPG
GOOGLE PLAY	FAV
NETFLIX	/ NET TV
YOUTUBE	/ SMART TUBE
PRIME VIDEO	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
I/II	SHIFT+MUTE
	SHIFT+EXIT
USB	SHIFT+
	SHIFT+
	SHIFT+
SUBT	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
	SHIFT+INFO
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

