



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
SALIR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
ENTRADA	/ SOURCE
	-/--
/ GUIA	
/ IMAGEN	
TXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
	SLEEP
DTV / RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
TS	EPG
/ TANAMO	/ NET TV
DETENER	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
/ SONIDO	SHIFT+
SUBTL	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

