



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
SALIR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
ENTRADA	/ SOURCE
TV/TXT	-/--
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
	SLEEP
TV/RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
GUIA	EPG
	FAV
	/ NET TV
CONGELAR	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
MOSTRAR	SHIFT+
TAMANO	SHIFT+
SUB.PG	SHIFT+
SUB - T	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
IMAGEN	SHIFT+TV/DTV
INDEX	SHIFT+INFO
SONIDO	SHIFT+FAV
STOP	SHIFT+
GRABAR	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

