



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	 / SOURCE
HDMI	-/--
DISPLAY	
SCREEN/ZOOM	
DTV/USB	
TV/TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
INDEX	TV/DTV
DIGEST/SCH LIST	INFO

ORIGINAL	SUPERIOR
EPG	EPG
CH FAV/D. CLEAR	FAV
ASPECT	 / NET TV
HOLD	 / SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
P. MODE	SHIFT+1
S. MODE	SHIFT+2
3D	SHIFT+3
REVEAL	SHIFT+ 
SIZE	SHIFT+ 
SUBPAGE	SHIFT+ 
SUBTITLE	SHIFT+ 
SKIP NEXT/PREV	SHIFT+ P +/-
PROGRAM/DELETE	SHIFT+EPG
BOOKMARK/REC LIST	SHIFT+FAV
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

