



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR/COUNT 0	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FM	/ SOURCE
BASS/TREBLE	-/--
DISPLAY/GUI	
SURR	
ANGLE/SOUND	
RDS	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT/TUNING+	P+
SKIP PREV/TUNING -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
SELECT VCR	TV/DTV
INDEX/RANDOM	INFO

ORIGINAL	SUPERIOR
SP LEVEL	FAV
EJECT	/ NET TV
PAUSE/TUNING MODE	/ SMART TUBE
STOP/FM MODE	/ SMART VIDEO
REC/OTR	RED
SLOW/SHUTTLE+	GREEN
PLAY	YELLOW
SLOW/SHUTTLE -	BLUE
AUDIO	SHIFT+MUTE
ZOOM/SLOW	SHIFT+
SETUP	SHIFT+
SUB - T/SPEED	SHIFT+
PR/TRACKING+	SHIFT+ P+
PR/TRACKING -	SHIFT+ P -
REPEAT	SHIFT+BACK
TV/VCR	SHIFT+ TV/DTV
TITLE/PBC / AUTO	SHIFT+INFO
T - REC	SHIFT+RED

