



| ORIGINAL                                                                                          | SUPERIOR                                                                                                 |
|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
|                    | <b>POWER</b>                                                                                             |
| <b>TIMER MENU</b>                                                                                 | <b>MENU</b>                                                                                              |
| <b>CLEAR</b>                                                                                      | <b>EXIT</b>                                                                                              |
| <b>USB SKIP/SELECT</b>                                                                            | <b>-/--</b>                                                                                              |
| <b>DISPLAY</b>                                                                                    |                         |
| <b>EQ</b>                                                                                         |                         |
| <b>TOOL MENU</b>                                                                                  |                         |
| <b>VOLUME+</b>                                                                                    | <b>VOL+</b>                                                                                              |
| <b>VOLUME -</b>                                                                                   | <b>VOL -</b>                                                                                             |
| <b>SKIP NEXT</b>                                                                                  | <b>P+</b>                                                                                                |
| <b>SKIP PREV</b>                                                                                  | <b>P -</b>                                                                                               |
| <b>UP</b>                                                                                         | <b>UP</b>                                                                                                |
| <b>DOWN</b>                                                                                       | <b>DOWN</b>                                                                                              |
| <b>LEFT</b>                                                                                       | <b>LEFT</b>                                                                                              |
| <b>RIGHT</b>                                                                                      | <b>RIGHT</b>                                                                                             |
|                  | <b>OK</b>                                                                                                |
|  / <b>RETURN</b> | <b>BACK</b>                                                                                              |
| <b>SLEEP</b>                                                                                      | <b>SLEEP</b>                                                                                             |
| <b>REPEAT/FM MODE</b>                                                                             | <b>TV/DTV</b>                                                                                            |
| <b>TUNER MEMORY</b>                                                                               | <b>EPG</b>                                                                                               |
| <b>PLAY MODE/TUN. MODE</b>                                                                        | <b>FAV</b>                                                                                               |
| <b>PAUSE</b>                                                                                      |  / <b>SMART TUBE</b>  |
| <b>STOP</b>                                                                                       |  / <b>SMART VIDEO</b> |
| <b>REW</b>                                                                                        | <b>GREEN</b>                                                                                             |
| <b>PLAY</b>                                                                                       | <b>YELLOW</b>                                                                                            |

[illegible]