



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
SETUP	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/--	-/--
DISPLAY / i	
SIZE	
MIX	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
SLEEP	SLEEP
RADIO / ZOOM -	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
EPG / ZOOM+	EPG
FAV	FAV
HOLD	 / SMART
RED / GOTO	RED
GREEN / A - B	GREEN
YELLOW / REPEAT	YELLOW
BLUE / ANGLE	BLUE
AUDIO / I/II	SHIFT+MUTE
DVD MENU / S.PAGE	SHIFT+MENU
CANCEL	SHIFT+EXIT
REVEAL	SHIFT+ 
P. MODE	SHFIT+ 
S. MODE	SHIFT+ 
SUBTITLE / S. TITLE	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAGE+ / PBC	SHIFT+UP
PAGE - / TITLE	SHIFT+DOWN
SCALER	SHIFT+BACK
EJECT	SHIFT+ 
PAUSE / STEP	SHIFT+ 
STOP	SHIFT+ 
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLLUE

