



ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
POWER	POWER		
MUTING	MUTE		
CANCEL	EXIT		
1/2/3/4/5	1/2/3/4/5		
6/7/8/9/0	6/7/8/9/0		
RANDOM	-/--		
DISPLAY			
/ PLAY			
/ REC			
VOLUME+	VOL+		
VOLUME -	VOL -		
SKIP NEXT / FWD	P+		
SKIP PREV / REW	P -		
SCROLL	BACK		
SLEEP	SLEEP		
AUTO / MONO	TV/DTV		
PROGRAM	EPG		
PAUSE			
STOP			
PLAY	YELLOW		
CD	SHIFT+1		
TAPE	SHIFT+2		
TUNER	SHIFT+3		

