



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
MENU	MENU
DELAY	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TEST	 / SOURCE
+10 / ENTER	-/--
DISPLAY	
DIRECT TUNE	
SURROUND	
SFC	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
SELECT	OK
STEREO	TV/DTV
PLAY	YELLOW
CD	SHIFT+1
DVD	SHIFT+2

[illegible]