



ORIGINAL	SUPERIOR
POWER	POWER
MUTING -20dB	MUTE
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
>10	-/--
PRO LOGIC MODE	
PRO LOGIC OFF/ON	
AUTO / MONO	
TEST	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
BALANCE L	LEFT
BALANCE R	RIGHT
REPEAT	BACK
SLEEP	SLEEP
TUNER / BAND	TV/DTV
PROGRAM	EPG
DELAY TIME	FAV
OPEN / CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
PLAY	YELLOW

ORIGINAL	SUPERIOR
VCR 1	SHIFT+1
VCR 2	SHIFT+2
VDP	SHIFT+3
DCC	SHIFT+4
PHONO	SHIFT+5
CD	SHIFT+6
CENTER+	SHIFT+UP
CENTER -	SHIFT+DOWN
SURROUND -	SHIFT+LEFT
SURROUND+	SHIFT+RIGHT
TAPE PLAY REVERSE	SHIFT+BACK
DECK 1 / 2	SHIFT+TV/DTV
TAPE OPEN / CLOSE	SHIFT+
TAPE STOP	SHIFT+
TAPE REC PAUSE	SHIFT+RED
TAPE REW	SHIFT+GREEN
TAPE PLAY	SHIFT+YELLOW
TAPE FWD	SHIFT+BLUE

