



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	AV
>10	-/--
DISPLAY	
SELECT DISC	
TUNE MODE	
SURROUND	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
BASS+	UP
BASS-	DOWN
TREBLE-	LEFT
TREBLE+	RIGHT
ENTER	OK
BACK	BACK
SLEEP	SLEEP
TV VIDEO	TV/DTV
DIMMER	INFO
PROGRAM	EPG

ORIGINAL	SUPERIOR
FM MODE	FAV
EJECT	
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SOUND VIRTUALIZER	SHIFT+MUTE
MD	SHIFT+AV
CH-	SHIFT+ P-
CH+	SHIFT+ P+
REPEAT	SHIFT+BACK
CLOCK	SHIFT+SLEEP
PLAY MODE	SHIFT+FAV
OPEN / CLOSE	SHIFT+
2nd STOP	SHIFT+
PLAY REC.	SHIFT+RED
TAPE – PLAY	SHIFT+YELLOW

