



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU/SETUP	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/--	-/--
INDEX	
SIZE	
MIX	
TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
SLEEP	SLEEP
DVD / USB	TV/DTV
DISPLAY INFO	INFO

ORIGINAL	SUPERIOR
EPG / ZOOM -	EPG
FAV	FAV
HOLD	
RED /GOTO	RED
GREEN / AB	GREEN
YELLOW / REPEAT	YELLOW
BLUE / ANGLE	BLUE
SOUND MODE	SHIFT+MUTE
DVD MENU	SHIFT+MENU
CANCEL	SHIFT+EXIT
AUDIO	SHIFT+1
REVEAL	SHIFT+ 
PICTURE MODE	SHIFT+ 
SCALER	SHIFT+ 
SUBTITLE	SHIFT+ 
SKIP NEXT / PREV	SHIFT+ P+/-
TITLE	SHIFT+INFO
RADIO	SHIFT+TV/DTV
PBC	SHIFT+FAV
EJECT	SHIFT+ 
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

