



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
DVD-MENU / S.PAGE	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
-/--	-/--
SCALER	
MIX / STEP	
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
SLEEP	SLEEP
RADIO / ZOOM-	TV/DTV
i / DISPLAY	INFO
EPG / ZOOM+	EPG

ORIGINAL	SUPERIOR
FAV	FAV
HOLD	
RED / GO TO	RED
GREEN / A-B	GREEN
YELLOW / REPEAT	YELLOW
BLUE / ANGLE	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
P. MODE	SHIFT+1
S. MODE	SHIFT+2
I/II	SHIFT+ -/--
REVEAL	SHIFT+
SIZE	SHIFT+
SETUP	SHIFT+
SUBTITLE	SHIFT+
PAGE- / TITLE	SHIFT+DOWN
PAGE+ / PBC	SHIFT+UP
SKIP PREV./NEXT	SHIFT+ P-/+
CALL	SHIFT+BACK
INDEX	SHIFT+INFO
EJECT	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

