



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / SOURCE	 / SOURCE
REC. LIST	-/--
D. DIS	
ZOOM	
SUBTITLE	
TEXT / D. SETUP	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
i / INFO	INFO

ORIGINAL	SUPERIOR
TV GUIDE	EPG
FAV	FAV
ASPECT	 / NET TV
HOLD	 / SMART VIDEO
RED / GO TO	RED
GREEN / A-B	GREEN
YELLOW / ANGLE	YELLOW
BLUE / REPEAT	BLUE
 DISPLAY	SHIFT+POWER
AUDIO	SHIFT+MUTE
D. MENU / INDEX	SHIFT+MENU
ATV	SHIFT+1
USB	SHIFT+2
DVD	SHIFT+3
R.VEAL / TITLE	SHIFT+ 
SIZE	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
EJECT	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

