



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	-/--
PRESET	
EQ	
MODE	
F+	VOL+
F -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT / VOL -	LEFT
RIGHT / VOL+	RIGHT
OK	OK
BACK	BACK
	SLEEP
	TV/DTV
INFO	INFO
SCAN	EPG
	FAV
EJECT	 / NET TV

[illegible]