



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9
0/AV	0
WWW	
SFI	
GENRE	
/ TXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ BACK	BACK
/ SLEEP	SLEEP
TV/RADIO	TV/DTV
INFO	INFO
NAV	EPG
STILL	/ SMART TUBE

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
/ TIMER	SHIFT+POWER
/ TON	SHIFT+MUTE
/ PIP	SHIFT+1
/ ZOOM	SHIFT+
OPT	SHIFT+
	SHIFT+UP
	SHIFT+DOWN
STOP/DVR	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

