



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ USB	/ SOURCE
/ FILE LIST	-/--
EDIT	
/ ZOOM	
/ ADVANCE	
TEXT	
VOL+	VOL+
VOL -	VOL-
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT / V -	LEFT
RIGHT / V+	RIGHT
OK	OK
/ RECALL	BACK
/ SLEEP	SLEEP
TV / SAT	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
FREEZE	
RED / / BOOKMARK	RED
GREEN	GREEN
YELLOW / COLOR	YELLOW
BLUE / POS	BLUE
AUDIO	SHIFT+MUTE
SAT	SHIFT+7
EDIT	SHIFT+
WIDE	SHIFT+
V. FORMAT	SHIFT+
/ SUBTITLE	SHIFT+
SLOW	SHIFT+SLEEP
TV / RAD.	SHIFT+TV/DTV
A - Z	SHIFT+FAV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

