



ORIGINAL	SUPERIOR
	POWER
	MUTE
/ MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	/ AV
REC LIST	-/--
UHF	
V-FORMAT	
POS.	
T-TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT / VOL-	LEFT
RIGHT / VOL+	RIGHT
OK	OK
PROV.	BACK
TIMER	SLEEP
TV / RAD	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
/ AUDIO	SHIFT+MUTE
MEDIA	SHIFT+6
SAT	SHIFT+7
USB	SHIFT+ ... / AV
LAN.	SHIFT+
F.	SHIFT+
/ BOOKMARK	SHIFT+
SU.B-T.	SHIFT+
SKIP NEXTY	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
<	SHIFT+LEFT
>	SHIFT+RIGHT
HDD	SHIFT+TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

