

ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
 / TITLE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / PROGRAM	 / AV
-/-- / +10 / EXIT	-/--
 / DISPLAY	
 / C.	
 / SUBTITLE	
 / REPEAT	
V+	VOL+
V-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / SELECT	OK
P<P / ZOOM	BACK
 / A→B	SLEEP
DTV	TV/DTV
i / INFO	INFO

ORIGINAL	SUPERIOR
 / GUIDE	EPG
PP	FAV
 / WIDE	
RED / RETURN / 	RED
GREEN / SUBTITLE / 	GREEN
YELLOW / AUDIO	YELLOW
BLUE / ANGLE	BLUE
I-II	SHIFT+MUTE
TV	SHIFT+ TV/DTV
TV	SHIFT+FAV
DVD	
	SHIFT+POWER
D-MENU	SHIFT+MENU
 / TITLE	SHIFT+EXIT
1/2/3/4/5	SHIFT+ 1/2/3/4/5
6/7/8/9/0	SHIFT+ 6/7/8/9/0
AV / PROGRAM	SHIFT+  /AV
-/-- / +10 / EXIT	SHIFT+ -/--
 / DISPLAY	SHIFT+ 
 / C.	SHIFT+ 
 / REPEAT	SHIFT+ 
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
RED / RETURN / 	SHIFT+UP

[illegible]