



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT / TELETEXT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / S / SCART	 / SOURCE
-/--	-/--
DISPLAY	
WIDE	
VIDEO MODE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
TV / DTV	TV/DTV
INFO	INFO
GUIDE / SUB PAGE	EPG

ORIGINAL	SUPERIOR
FAVORITES	FAV
HOLD	 / SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO MODE	SHIFT+MUTE
SURROUND	SHIFT+1
SOUND	SHIFT+2
HDTV / PC / HDMI	SHIFT+ 
LIST	SHIFT+ -/--
SUBTITLE	SHIFT+ 
INDEX / SELECT	SHIFT+INFO

