



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
REC LIST	-/--
P. MODE	
ASPECT	
SUBTITLE	
TEXT	
VOL -/+	VOL -/+
CH -/+	P -/+
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
DTV	TV/DTV
INFO	INFO
TV GUIDE	EPG
FAV	FAV

ORIGINAL	SUPERIOR
TEXT HOLD	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
DISPLAY	SHIFT+POWER
AUDIO	SHIFT+MUTE
DVD MENU	SHIFT+MENU
USB / DVD	SHIFT+ 1/2
3D	SHIFT+3
GO TO	SHIFT+ -/--
S. MODE	SHIFT+
TEXT/DVD ZOOM	SHIFT+
ANGLE	SHIFT+
SKIP PREV./NEXT	SHIFT+ P -/+
REPEAT	SHIFT+BACK
A – B	SHIFT+SLEEP
RADIO	SHIFT+TV/DTV
DVD SETUP	SHIFT+EPG
EJECT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

