



ORIGINAL	SUPERIOR
	POWER
	MUTE
 / MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
VIDEO	
OPZIONI	
TEXT	
VOLUME+	VOL+
VOLUME-	VOL-
PROGRAMMI+	P+
PROGRAMMI-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
INFO	INFO
GUIDA	EPG
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE

[illegible]