



| ORIGINAL         | SUPERIOR  |
|------------------|-----------|
| STANDBY          | POWER     |
| MUTE             | MUTE      |
| / MENU           | MENU      |
| EXIT / DVD SETUP | EXIT      |
| 1/2/3/4/5        | 1/2/3/4/5 |
| 6/7/8/9/0        | 6/7/8/9/0 |
| / INPUT          | / SOURCE  |
| -/--             | -/--      |
| DISPLAY / i+     |           |
|                  |           |
|                  |           |
|                  |           |
| VOL+             | VOL+      |
| VOL -            | VOL -     |
| CH+              | P+        |
| CH -             | P -       |
| UP               | UP        |
| DOWN             | DOWN      |
| LEFT             | LEFT      |
| RIGHT            | RIGHT     |
|                  | OK        |
|                  | BACK      |
| / SLEEP          | SLEEP     |
| ANGLE / LIST     | TV/DTV    |
|                  | INFO      |

| ORIGINAL       | SUPERIOR     |
|----------------|--------------|
| EPG / D. MENU  | EPG          |
| - / D. DISP.   | FAV          |
| / ASPECT       | / NET TV     |
| RED / PROG.    | RED          |
| GREEN / INTRO  | GREEN        |
| YELLOW / RPT   | YELLOW       |
| BLUE / A - B   | BLUE         |
| / NICAM        | SHIFT+MUTE   |
|                | SHIFT+       |
| + / GOTO       | SHIFT+       |
|                | SHIFT+       |
| / SUB - T      | SHIFT+       |
| SKIP NEXT/PREV | SHIFT+ P+/-  |
|                | SHIFT+UP     |
|                | SHIFT+DOWN   |
| STEP           | SHIFT+SLEEP  |
| / P. MODE      | SHIFT+TV/DTV |
| / TITLE        | SHIFT+INFO   |
| / S. MODE      | SHIFT+FAV    |
| AUTO           | SHIFT+       |
| STOP           | SHIFT+       |
| REC            | SHIFT+RED    |
| REW            | SHIFT+GREEN  |
| PLAY / PAUSE   | SHIFT+YELLOW |
| STOP           | SHIFT+BLUE   |

