



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
PC	/ SOURCE
S/M/D	-/--
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
PP	SLEEP
TV	TV/DTV
	INFO

ORIGINAL	SUPERIOR
NI	EPG
SSID	FAV
RED	RED
GREEN / /	GREEN
YELLOW / /	YELLOW
BLUE / FREEZE	BLUE
/ MENU	SHIFT+MENU
	SHIFT+EXIT
PIP	SHIFT+1
16:9	SHIFT+9
/ AV	SHIFT+
	SHIFT+
ZOOM	SHIFT+
	SHIFT+
	SHIFT+
AV+	SHIFT+ P+
AV -	SHIFT+ P -
/	SHIFT+BACK
/ TV	SHIFT+TV/DTV

