



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	[Source icon] / SOURCE
[Q.Menu icon] / Q. MENU	-/--
	[Channel up/down icon]
	[List icon]
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV	TV/DTV
i	INFO
	EPG
	[Net TV icon] / NET TV
	[Smart Video icon] / SMART VIDEO

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
LANG.	SHIFT+MUTE
	SHIFT+1
	SHIFT+2
	SHIFT+ [List icon]
	SHIFT+BACK
PAUSE	SHIFT+ [Pause icon]
STOP	SHIFT+ [Stop icon]
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

