



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
/ TXT	
V+	VOL+
V-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TWITCH	SLEEP
RAKUTEN TV	TV/DTV
i	INFO
/ G	EPG
/ 1	FAV
NETFLIX	/ NET TV
YOUTUBE	/ SMART TUBE

ORIGINAL	SUPERIOR
PRIME VIDEO	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
/ LANG.	SHIFT+MUTE
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

