



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	 / SOURCE
	
GOOGLE PLAY	
LANG.	
TEXT	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
←	BACK
i	INFO
 / G	EPG
 / 1	FAV
NETFLIX	 / NET TV

[illegible]