



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
 / AV	 / SOURCE
 / -/--	-/--
 / 	
	
 / 	
 /  / 	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
 *	BACK
VIDEO	TV/DTV
i	INFO
GUIDE	EPG

[illegible]