



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9
0 / 10	0
SOURCE	 / SOURCE
10+	-/--
OSD	
GO TO	
SETUP	
SUBT	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TITLE	INFO
PROG	EPG

ORIGINAL	SUPERIOR
ANGLE	FAV
OPEN/CLOSE	 / NET TV
PAUSE	 / SMART TUBE
STOP	 / SMART VIDEO
REV	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
PBC	SHIFT+1
L/R	SHIFT+2
N/P	SHIFT+3
V - MODE	SHIFT+ 
ZOOM	SHIFT+ 
STEP	SHIFT+OK
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
SLOW	SHIFT+FAV

