



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	 / AV
---	-/--
VOL+	VOL+
VOL-	VOL-
PR+	P+
PR-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
← PR	BACK
SAT / SCAN	SLEEP
TV / RADIO	TV/DTV
INFO	INFO
EPI	EPG
FAV	FAV
RED / AUDIO	RED
GREEN	GREEN

[illegible]