



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ SOURCE	/ SOURCE
A. RATIO	-/--
VIDEO	
/ DTV / RADIO	
SOUND	
/ TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED / D. SETUP	RED
GREEN / REPEAT	GREEN
YELLOW / ZOOM	YELLOW
BLUE / GOTO	BLUE
I/II / AUDIO	SHIFT+MUTE
/ USB	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
/ TIME SHIFT	SHIFT+SLEEP
/ PVR	SHIFT+INFO
	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

