



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ SOURCE	/ SOURCE
LIST	-/--
/ STILL	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RECALL	BACK
FAV+	TV/DTV
/ INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV -	FAV
/	/ NET TV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO / I/II	SHIFT+MUTE
	SHIFT+EXIT
---	SHIFT+ -/--
/ SUBTITLE	SHIFT+
RADIO	SHIFT+TV/DTV

