



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
DTT	-/--
PICTURE	
SIZE/MOUSE	
SOUND	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
ASPECT	/ NET TV
HOLD/REFRESH	/ SMART TUBE
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
SAT	SHIFT+7
USB	SHIFT+
REVEAL	SHIFT+
SUB.PG	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
TIMESHIFT	SHIFT+SLEEP
INDEX	SHIFT+INFO
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

