



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT / DVD SETUP	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	 / SOURCE
-/--	-/--
DISPLAY	
ASPECT	
P. MODE	
TEXT / ANGLE	
VOL+	VOL+
VOL-	VOL-
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INDEX / D. MENU	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV	FAV
AUTO / EJECT	 / NET TV
HOLD / ZOOM	 / SMART
RED / PROG	RED
GREEN / INTRO	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A - B	BLUE
S. MODE	SHIFT+MUTE
NICAM	SHIFT+1
MEDIA / STEP	SHIFT+6
REVEAL / D. DISP	SHIFT+ 
SIZE / TITLE	SHIFT+ 
LANG / AUDIO	SHIFT+ 
SUBTITLE	SHIFT+ 
FAV +	SHIFT+UP
FAV -	SHIFT+DOWN
SKIP NEXT	SHIFT+ P +
SKIP PREV	SHIFT+ P -
SUBPAGE / GO TO	SHIFT+FAV
STOP	SHIFT+ 
PLAY / PAUSE	SHIFT+YELLOW
REW	SHIFT+GREEN
FWD	SHIFT+BLUE

