



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
LIST	-/--
PICTURE	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
	SLEEP
TV	TV/DTV
/ INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
ASPECT	/ NET TV
APP	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
	SHIFT+EXIT
USB	SHIFT+
	SHIFT+
	SHIFT+
SOUND	SHIFT+
SUB	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
STOP	SHIFT+
REW	SIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

