



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
CH.LIST	-/--
DEEZER	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
FREE	SLEEP
BROWSER	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
DISNEY+	FAV
NETFLIX	/ NET TV
YOUTUBE	/ SMART TUBE
PRIME VIDEO	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
MEDIA	SHIFT+6
SUBTITLE	SHIFT+
PLAY/PAUSE	SHIFT+YELLOW

