



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ SOURCE	/ SOURCE
LIST	-/--
PICTURE	
ASPECT	
COLOR	
TTX/MIX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ BACK	BACK
SLEEP	SLEEP
SAT	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
TIMER	SHIFT+POWER
AUDIO	SHIFT+MUTE
USB	SHIFT+
DTT	SHIFT+
SOUND	SHIFT+
SUB	SHIFT+
TV/RADIO	SHIFT+TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REW/SKIP PREV	SHIFT+GREEN
PLAY	HIFT+YELLOW
FWD/SKIP NEXT	SHIFT+BLUE

