



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
LIST	-/--
/ HOME	
SIZE/MUOSE	
MIX	
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
SUB. PG	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG SET	EPG
FAV	FAV
ASPECT	/ NET TV
FREEZE	/ SMART TUBE
HOLD/REFRESH	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
/ APP	SHIFT+8
REVEAL	SHIFT+
SOUND	SHIFT+
PICTURE	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
INDEX	SHIFT+INFO
CAPTURE	SHIFT+FAV
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

