



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
OK	OK
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
BACK	BACK
TEXT	TXT
RED	RED
DOWN	DOWN
LEFT / SKIP PREV.	LEFT
RIGHT / SKIP NEXT	RIGHT
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
INFO	INFO
VCR	AV
TV / RADIO	TV/DTV
TIMESHIFT	SLEEP

[illegible]