


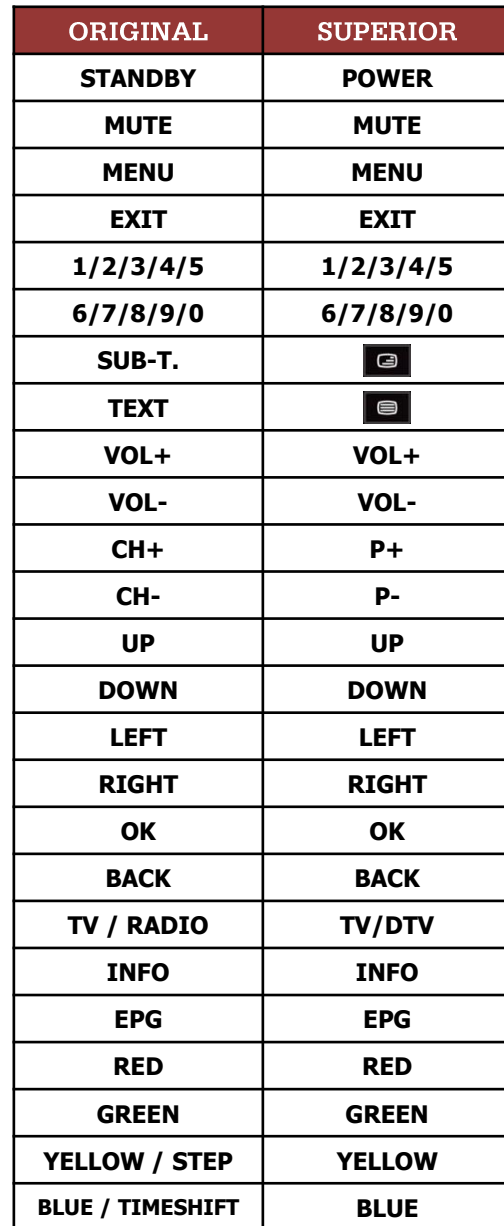

A black Superior 4 in 1 remote control. The top features a red Power button and a Mute button with a speaker icon. Below these are four small indicator lights and four function buttons: TV, SAT, DVD, and AUX. The next row contains MENU, EXIT, and SHIFT buttons. A numeric keypad (1-9, 0, and a slash/underscore key) follows. Below the numbers are TV/AV, PVR, SIZE, and SETUP buttons. The center features a large directional pad with an OK button in the middle, and volume (+V, -V) and channel (+P, -P) controls. The bottom section includes BACK, SLEEP, TV/DTV, INFO, EPG, FAV, a red NET TV button, a pause II button, a SMART button, and four color-coded playback buttons: red (stop), green (previous), yellow (play), and blue (next). The bottom of the remote is labeled "SUPERIOR 4 in 1".