



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SUB	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
PP	BACK
TV / RADIO	TV/DTV
INFO	INFO
---	EPG
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE

