



ORIGINAL	SUPERIOR
	POWER
	MUTE
M / MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / SOURCE	 / SOURCE
RETURN	-/--
SCREEN	
	
	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / SELECT	OK
 / SWAP	BACK
SLEEP	SLEEP
TV / DTV	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV

[illegible]