



ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
	POWER		
MUTE	MUTE		
MENU	MENU		
EXIT	EXIT		
1/2/3/4/5	1/2/3/4/5		
6/7/8/9/0	6/7/8/9/0		
A / B	-/--		
V+	VOL+		
V-	VOL-		
P+	P+		
P-	P-		
OK	OK		
	BACK		
TV / 	TV/DTV		
INFO	INFO		
EPG	EPG		
RED / F1	RED		
GREEN / F2	GREEN		
YELLOW / F3	YELLOW		
BLUE / F4	BLUE		

