



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DTV / VCR	 / SOURCE
GO TO	-/--
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
TV/RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAVOURITE	FAV
RED / ZOOM	RED
GREEN	GREEN

[illegible]