



ORIGINAL	SUPERIOR
	POWER
	MUTE
TV MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
CH.LIST	-/--
PBC	
GOTO	
ADJUST	
TXT/MIX	
VOL +/-	VOL +/-
CH +/-	P +/-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL/PREV	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
INFO / DVD DISPLAY	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
ASPECT	/ NET TV
FREEZE	
HOLD / A – B	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
DVD SETUP	SHIFT+MENU
MENU	SHIFT+EXIT
REVEAL / RETURN	SHIFT+
SIZE	SHIFT+
USB LIGHT	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT/PREV	SHIFT+ P +/-
SUBPAGE/REPEAT	SHIFT+BACK
SOUND	SHIFT+SLEEP
PIC	SHIFT+TV/DTV
TITLE	SHIFT+INFO
INDEX/ANGLE	SHIFT+EPG
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REW/FWD	SHIFT+GREEN/BLUE
PLAY/PAUSE	SHIFT+YELLOW

