



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	/ SOURCE
SHIFT	
VOL+	VOL+
VOL -	VOL -
PR+	P+
PR -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / LIST	OK
← PR.	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
V – FORMAT	/ NET TV
RED / FIND	RED

ORIGINAL	SUPERIOR
GREEN / TXT	GREEN
YELLOW / 	YELLOW
BLUE / 	BLUE
F1	SHIFT+1
F2	SHIFT+2
PAGE+	SHIFT+UP
PAGE -	SHIFT+DOWN
SLOW BACK	SHIFT+LEFT
SLOW FWD	SHIFT+RIGHT
PAUSE	SHIFT+
STOP	SHIFT+
RECORD	SHIFT+RED
FAST REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FAST FWD	SHIFT+BLUE

