



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU/T.CH+	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HDMI	/ SOURCE
HDMMI/FORMAT	-/--
OSD/RDS	
GOTO	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT/T.SEARCH -	LEFT
RIGHT/T.SEARCH+	RIGHT
OK/T.SAVE	OK
REPEAT	BACK
SLOW	SLEEP
A - B	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROGRAM	EPG
MARK	FAV
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO/FM ST.	SHIFT+MUTE
COMPONENT	SHIFT+MENU
EQ	SHIFT+EXIT
AUX - IN	SHIFT+1
DVD	SHIFT+2
S/PDIF	SHIFT+3
TUNER	SHIFT+4
USB	SHIFT+5
RANDOM	SHIFT+ -/--
P - SCAN	SHIFT+
ZOOM	SHIFT+
ANGLE	SHIFT+
RGB	SHIFT+
TREBLE	SHIFT+SLEEP
BASS	SHIFT+TV/DTV
STEREO/DVS	SHIFT+INFO

