



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV/AV / TV/VCR	AV
/ HDD	-/--
/ MULTI.	
RATIO	
MIX	
TXT / TEXT	
VOL+	VOL+
VOL-	VOL-
PR+	P+
PR-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/	BACK
/ SLEEP	SLEEP
TV/RAD. / TV/RADIO	TV/DTV
i / INFO	INFO

ORIGINAL	SUPERIOR
EPG / GUIDE	EPG
FAV	FAV
RED / VIDEO	RED
GREEN / HDMI	GREEN
YELLOW / RGB	YELLOW
BLUE / YUV	BLUE
? / AUDIO	SHIFT+MUTE
PIP	SHIFT+1
SAT	SHIFT+7
/ USB	SHIFT+AV
SCALE	SHIFT+
/ SUBTITLE	SHIFT+
SKIP -/PREV.	SHIFT+ P-
SKIP +/NEXT	SHIFT+ P+
SLOW R.	SHIFT+LEFT
SLOW F.	SHIFT+RIGHT
STEP	SHIFT+SLEEP
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
F. RWD.	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
F. FWD.	SHIFT+BLUE

