



| ORIGINAL  | SUPERIOR  |
|-----------|-----------|
|           | POWER     |
| MUTE      | MUTE      |
| MENU      | MENU      |
| CLEAR     | EXIT      |
| 1/2/3/4/5 | 1/2/3/4/5 |
| 6/7/8/9/0 | 6/7/8/9/0 |
| CARD/DVD  | / SOURCE  |
| VIDEO OUT | -/--      |
| DISPLAY   |           |
| ZOOM      |           |
| SETUP     |           |
| SUBTITLE  |           |
| VOL+      | VOL+      |
| VOL -     | VOL -     |
| SKIP NEXT | P+        |
| SKIP PREV | P -       |
| UP        | UP        |
| DOWN      | DOWN      |
| LEFT      | LEFT      |
| RIGHT     | RIGHT     |
| OK        | OK        |
| RETURN    | BACK      |
| ANGLE     | SLEEP     |
| MODE      | TV/DTV    |
| TITLE     | INFO      |

| ORIGINAL   | SUPERIOR    |
|------------|-------------|
| PROGRAM    | EPG         |
| MARK       | FAV         |
| OPEN/CLOSE | / NET TV    |
| PAUSE/STEP |             |
| STOP       | / SMART     |
| REW        | GREEN       |
| PLAY       | YELLOW      |
| FWD        | BLUE        |
| AUDIO      | SHIFT+MUTE  |
| SEARCH     | SHIFT+EXIT  |
| PAGE+      | SHIFT+UP    |
| PAGE -     | SHIFT+DOWN  |
| REPEAT     | SHIFT+BACK  |
| A - B      | SHIFT+FAV   |
| SLOW R     | SHIFT+GREEN |
| SLOW F     | SHIFT+BLUE  |
|            |             |
|            |             |
|            |             |
|            |             |
|            |             |
|            |             |
|            |             |
|            |             |
|            |             |

